

the attention of your supervisor. Do not operate this equipment unless you have read and understood the contents of this manual.

puede entender el contenido de este manual por favor pregunte a su supervisor. No opere este equipo al menos que haya leído y comprendido el contenido de este manual.

CONTENTS

Important Owner Information	
Important Safety Information	
Model Designations	2
Model Descriptions	
Specifications	4
Electrical Rating Charts	
Dimensions	10
Installation	11
Unpacking	11
Location	
Assembly	13
Portable Surface Mount	13

Permanent Surface Mount	14
Undershelf Mounting	15
Ceiling Mounting	17
Electrical Wiring Hook-Up	
Operation	19
Maintenance	20
Cleaning	20
Display Light Bulb Replacement	20
Accessories	21
Troubleshooting Guide	22
Hatco Limited Warranty	24
Authorized Parts Distributors	Back Cover

IMPORTANT OWNER INFORMATION

Record the model number, serial number (identification decal located on the underside of the unit), voltage and purchase date of your Infrared Strip Heater in the spaces below. Please have this information available when calling Hatco for service assistance.

Model No.				

Serial No. _____

Voltage

Date of Purchase _____

Business Hours:	8:00 a.m. to 5:00 p.m. Central Standard Time
	(Summer Hours: June to September - 8:00 a.m. to 5:00 p.m. C.D.T. Monday through Thursday 8:00 a.m. to 2:30 p.m. C.D.T. Friday)
Telephone:	(800) 558-0607; (414) 671-6350
Fax:	(800) 690-2966 (Parts & Service) (414) 671-3976 (International)
24.4	24-Hour 7-Day Parts & Service Assistance available in the United States and Canada by calling (800) 558-0607.

Additional information can be found by visiting our web site at **www.hatcocorp.com**

INTRODUCTION

Hatco Glo-Ray[®] Strip Heaters ensure maximum food holding and minimize the risk of food-borne illness. Optimum safety and quality is the result of food held at the proper serving temperatures, using Glo-Ray's pre-focused heat patterns. The prefocused heat pattern prevents foods from being over-cooked in the middle and cooling off around the edges by concentrating higher temperatures to the outer edges of holding surfaces where heat loss is the greatest. Utilizing specially designed reflectors to direct the heat from the element, Glo-Ray Strip Heaters safely maintain peak serving temperatures longer, without cooking the food beyond the point of excellence.

The Glo-Ray Strip Heaters are available with or without shatter-resistant incandescent lights to illuminate the warming area. These bulbs have a special coating that guards against injury and food contamination in the event of breakage. This manual provides the installation, safety and operating instructions for the Strip Heaters. We recommend all installation, operating and safety instructions appearing in this manual be read prior to installation or operation of your Hatco Strip Heaters. Safety instructions that appear in this manual after a warning symbol \triangle and the words **WARNING** or **CAUTION** printed in bold face are very important. \triangle **WARNING** means there is the possibility of serious personal injury or death to yourself or others. \triangle **CAUTION** means there is the possibility of minor or moderate injury. **NOTICE** without the symbol signifies the possibility of equipment or property damage only.

Hatco Strip Heaters are a product of extensive research and field testing. The materials used were selected for maximum durability, attractive appearance and optimum performance. Every unit is thoroughly inspected and tested prior to shipment. **IMPORTANT!** Read the following important safety information to avoid personal injury or death, and to avoid damage to the equipment or property.

- A Only light bulbs which meet or exceed NSF standards, specifically designed for food holding areas may be used. Breakage of light bulbs not specially coated could result in personal injury and/or food contamination.
- ▲ Units equipped with a cord and plug supplied by Hatco must be plugged into a properly grounded electrical outlet of the correct voltage, size and plug configuration. If the plug and receptacle do not match, contact a qualified electrician to determine the proper voltage and size and install the proper electrical outlet.
- ☆ For safe and proper operation, the unit must be located the correct distance from combustible walls and materials. If safe distances are not maintained, discoloration or combustion could occur. Refer to specific installation and mounting information in this manual for proper clearances.
- To prevent any injury or damage to the unit do not store or use gasoline or other flammable vapors or liquids in the vicinity of this or any other appliance.
- The unit is not waterproof. DO NOT submerge in water. Do not operate if it has been submerged in water.
- ☆ To prevent combustion or damage to materials do not install standard wattage strip heater (GR, GRA, GRN, GRAL Series) less than 10" (254 mm) above a non-metallic surface. Do not install high wattage strip heater (GRH, GRAH, GRNH, GRAHL Series) less than 13-1/2" (343 mm) above a nonmetallic surface. Do not install dual strip heaters (GRA-XXD, GRAH-XXD, GRAL-XXD & GRAHL-XXD Series) above non-metallic surface. Install all non-dual strip heaters so there is a minimum distance of 3" (76 mm) from a non-metallic wall or adjacent surface.
- ☆ To avoid any injury or damage to the unit when using chains for installation, the chains must have sufficient strength and be securely fastened, or the unit could become loose or fall. Do not place anything on top of warmers supported by chains.

- ☆ To avoid any injury or damage all electrical connections must be in accordance with local electrical codes and any other applicable codes. Connections should be made by a qualified, licensed electrician.
- ☆ To avoid any injury or damage to the strip heater turn the power OFF at the disconnect switch/circuit breaker and allow to cool before performing any maintenance.
- ☆ This product has no "user" serviceable parts. To avoid damage to the unit or injury to personnel, use only Authorized Hatco Service Agents and Genuine Hatco Replacement Parts when service is required.
- ▲ Genuine Hatco Replacement Parts are specified to operate safely in the environments in which they are used. Some aftermarket or generic replacement parts do not have the characteristics that will allow them to operate safely in Hatco equipment. It is essential to use Hatco Replacement Parts when repairing Hatco equipment. Failure to use Hatco Replacement Parts may subject operators of the equipment to hazardous electrical voltage, resulting in electrical shock or burn.

- ☆ Standard and approved manufacturing oils will smoke up to 30 minutes during initial start-up. This is a temporary condition. To assure safe operation, operate unit without food product until smoke dissipates.
- ☆ Some exterior surfaces on the unit will get hot. Use caution when touching these areas to avoid injury.
- ☆ To prevent unit failure do not add a decorative soffit to hide a pass-through mounted Glo-Ray Strip Heater.
- ☆ Strip Heaters with incandescent lights that require a circuit breaker larger than 20 amps must have a separate circuit breaker for the incandescent lights that is 20 amps or less.
- To assure safe and proper operation refer to Installation Clearance Requirements listed in this manual.
- ⚠ Installation of two or more single units with less than 3" (76 mm) between housings may result in premature failure of component parts.
- Unit is not moisture proof. Spacing of at least 16" (406 mm) is required for all units mounted over a steam table.

NOTICE

Use only non-abrasive cleaners. Abrasive cleaners could scratch the finish of your unit, marring its appearance and making it susceptible to dirt accumulation.

To prevent premature failure to components the Remote Control Box (RMB) must be installed outside the strip heater heat zone.

Heat damage to countertop material such as Corian[®] and similar products (other than stainless steel) is not covered under the Hatco warranty. Contact the manufacturer of the base material for temperature limits and application information before installing the unit.

MODEL DESIGNATION

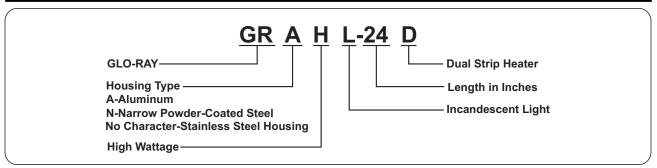


Figure 1. Model Designation

MODEL DESCRIPTIONS

Hatco Glo-Ray[®] Infrared Strip Heater keep hot foods at optimum serving temperatures longer. Foods do not dry out or become discolored; even the most delicate dishes hold that "just-prepared" look. The Glo-Ray pre-focused heat pattern directs heat from a tubular element to bathe the entire holding surface.

Hatco Glo-Ray[®] Strip Heater can be ordered in standard or high wattage configurations, aluminum housings in lengths of 18" (457 mm) to 144" (3658 mm), stainless steel housings in lengths of 24" (610 mm) to 96" (2438 mm) or narrow design housings in lengths of 18" (457 mm) to 72" (1829 mm).

All Strip Heaters have several mounting options and switch locations. Optional infinite control switches, remote control enclosures, incandescent lighting and breath protectors are available.

The Glo-Ray dual models allow for side by side mounting of two or more strip heaters installed (with a required 3" (76 mm) or 6" (152 mm) spacer), to provide a wider holding area.

GR-XX:	Stainless steel housing, standard wattage
GRH-XX:	Stainless steel housing, high wattage
GRN-XX:	Narrow design, powder-coated painted steel housing, standard wattage
GRNH-XX:	Narrow design, powder-coated painted steel housing, high wattage

NOTE: Stainless steel and narrow design Strip Heaters are not available with lights, breath protectors or as dual units.

GRA-XX:	Aluminum housing, standard wattage
GRAH-XX:	Aluminum housing, high wattage
GRAL-XX:	Aluminum housing, standard wattage,
	incandescent light
GRAHL-XX:	Aluminum housing, high wattage,
	incandescent light
GRA-XXD:	Aluminum housing, standard wattage, dual
GRAH-XXD:	Aluminum housing, high wattage, dual
GRAL-XXD:	Aluminum housing, standard wattage,
	incandescent light, dual
GRAHL-XXD	:Aluminum housing, high wattage,
	incandescent light, dual

NOTE: Incandescent lights and breath protectors not available for retro-fit.

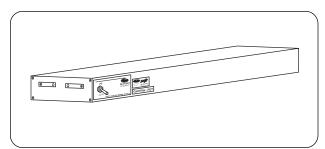


Figure 2. GRA-24 Model

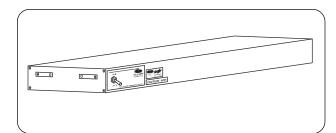


Figure 3. GRAHL-24 Model

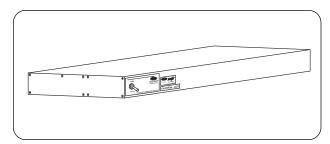


Figure 4. GRA-24D Model

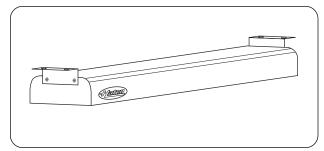


Figure 5. GRN-24 Model

GR MODELS-ELECTRICAL RATING CHART

Mod	el GR-1	8	Watts: 250		Shipping We	eight: 7 lbs	. (3 kg)	
Voltage	120	208	240	100	200	220 ♦	240 ♦	
Amps	2.1	1.2	1.0	2.5	1.3	1.1	1.0	
Mod	el GR-2	4	Watts: 350	Natts: 350 Shipping Weight: 7 lbs. (3 kg				
Voltage	120	208	240	100	200	220♦	240♦	
Amps	2.9	1.7	1.5	3.5	1.8	1.6	1.5	
Mod	el GR-3	6	Watts: 575		Shipping W	eight: 10 lb	s. (5 kg)	
Voltage	120	208	240	100	200	220♦	240♦	
Amps	4.8	2.7	2.4	5.8	2.9	2.6	2.4	
Mod	el GR-4	8	Watts: 800		Shipping Weight: 12 lbs. (5 kg)			
Voltage	120	208	240	100	200	220♦	240♦	
Amps	6.7	3.8	3.3	8.0	4.0	3.6	3.3	
Mod	el GR-6	0	Watts: 105	C	Shipping Weight: 15 lbs. (7 kg)			
Voltage	120	208	240	100	200	220♦	240♦	
Amps	8.8	5.0	4.4	10.5	5.3	4.8	4.4	
Mod	el GR-7	2	Watts: 127	5	Shipping Weight: 19 lbs. (9 kg)			
Voltage	120	208	240	100	200	220♦	240♦	
Amps	10.6	6.1	5.3	12.8	6.4	5.8	5.3	
Mod	el GR-9	6	Watts: 172	5	Shipping W	eight: 24 lb	s. (11 kg)	
Voltage	120	208	240	100	200	220♦	240♦	
Amps	14.4	8.3	7.2	17.3	8.6	7.8	7.2	

GRH MODELS-ELECTRICAL RATING CHART

Model GRH-18			Watts: 350		Shipping We	eight: 7 lbs.	(3 kg)	
Voltage	120	208	240	100	200	220 ♦	240 ♦	
Amps	2.9	1.7	1.5	3.5	1.8	1.6	1.5	
Mod	el GRH-	-24	Watts: 500		Shipping We	eight: 7 lbs.	(3 kg)	
Voltage	120	208	240	100	200	220♦	240♦	
Amps	4.2	2.4	2.1	5.0	2.5	2.3	2.1	
Model GRH-36			Watts: 800		Shipping We	eight: 10 lbs	s. (5 kg)	
Voltage	120	208	240	100	200	220♦	240♦	
Amps	6.7	3.8	3.3	8.0	4.0	3.6	3.3	
Mod	el GRH-	48	Watts: 1100		Shipping Weight: 12 lbs. (5 kg)			
Voltage	120	208	240	100	200	220♦	240♦	
Amps	9.2	5.3	4.6	11.0	5.5	5.0	4.6	
Mod	el GRH-	·60	Watts: 1400		Shipping Weight: 15 lbs. (7 kg)			
Voltage	120	208	240	100	200	220♦	240♦	
Amps	11.7	6.7	5.8	14.0	7.0	6.4	5.8	
Mod	el GRH-	72	Watts: 1725	5	Shipping Weight: 19 lbs. (9 kg		s. (9 kg)	
Voltage	120	208	240	100	200	220♦	240♦	
Amps	14.4	8.3	7.2	17.3	8.6	7.8	7.2	
Mod	el GRH-	96*	Watts: 2400)	Shipping Weight: 24 lbs. (1		s. (11 kg)	
Voltage	120	208	240	100	200	220♦	240♦	
Amps		11.5	10.0		12.0	10.9	10.0	

The electrical information in the shaded area pertains to **Export Models** only.

* Not available in 100 or 120 volts.

◆CE approved units for 220-230 volt utilize a 220 volt heating system; 230-240 CE units utilize a 240 volt heating system.

GRA MODELS-ELECTRICAL RATING CHART

Mad		40	Matter 250	<u> </u>	Chinaina W	aishti C Iba	(2.1/m)	\sim	
	el GRA		Watts: 250		Shipping W	-			Mo
Voltage	120	208 1.2	240	100	200 1.3	220♦	240♦		/oltage
Amps	2.1		1.0	2.5		1.1	1.0		mps
	lel GRA		Watts: 350		Shipping W	-			Mo
Voltage	120	208	240	100	200	220♦	240♦		/oltage
Amps	2.9	1.7	1.5	3.5	1.8	1.6	1.5		mps
	el GRA		Watts: 450		Shipping W	-			Мо
Voltage	120	208	240	100	200	220♦	240♦		/oltage
Amps	3.8	2.2	1.9	4.5	2.3	2.1	1.9	A	mps
	el GRA		Watts: 578		Shipping W	-			Мо
Voltage	120	208	240	100	200	220♦	240♦		/oltage
Amps	4.8	2.8	2.4	5.8	2.9	2.6	2.1		mps
	el GRA		Watts: 675		Shipping W	-			Мо
Voltage	120	208	240	100	200	220♦	240♦	V	/oltage
Amps	5.6	3.2	2.8	6.8	3.4	3.1	2.8	A	mps
Mod	el GRA	-48	Watts: 800)	Shipping W	eight: 11 lbs	s. (5 kg)		Мо
Voltage	120	208	240	100	200	220♦	240♦	V	/oltage
Amps	6.7	3.8	3.3	8.0	4.0	3.6	3.3	A	mps
Mod	el GRA	-54	Watts: 925	5	Shipping W	eight: 13 lbs	s. (6 kg)		Мо
Voltage	120	208	240	100	200	220♦	240♦	V	/oltage
Amps	7.7	4.4	3.9	9.3	4.6	4.2	3.9	A	mps
Mod	el GRA	-60	Watts: 105	50	Shipping W	eight: 14 lbs	s. (6 kg)	1 [Мо
Voltage	120	208	240	100	200	220♦	240♦	V	/oltage
Amps	8.8	5.0	4.4	10.5	5.3	4.8	4.4	A	mps
Mod	el GRA	-66	Watts: 116	60	Shipping W	eight: 16 lbs	s. (7 kg)	1	Мо
Voltage	120	208	240	100	200	220♦	240♦	V	/oltage
Amps	9.7	5.6	4.8	11.6	5.8	5.3	4.8	A	mps
Mod	el GRA	-72 =	Watts: 127	75	Shipping W	eight: 17 lbs	s. (8 kg)	1 [Мо
Voltage	120	208	240	100	200	220♦	240♦	V	/oltage
Amps	10.6	6.1	5.3	12.8	6.4	5.8	5.3	A	mps
Mod	el GRA	-84•∎	Watts: 150	00	Shipping W	eight: 19 lb:	s. (9 kg)	1 1	Мо
Voltage	120	208	240	100	200	220♦	240♦	V	/oltage
Amps	12.5	7.2	6.3	15.0	7.5	6.8	6.3	A	mps
Mod	el GRA	-96• =	Watts: 172	25	Shipping W	eight: 21 lb:	s. (10 kg)	1 1	Mo
Voltage	120	208	240	100	200	220♦	240♦	V	/oltage
Amps	14.4	8.3	7.2	17.3	8.6	7.8	7.2		mps
Mod	el GRA	-108+	Watts: 18	50	Shipping W	eiaht: 23 lb:	s. (10 kg)	1 1	Mo
Voltage	120	208	240	100	200	220	240	V	/oltage
Amps	15.4	8.9	7.7	18.5	9.3	8.4	7.7		mps
•	el GRA		Watts: 210		Shipping W				Mo
Voltage	120	208	240	100	200	220 220	240	N	/oltage
Amps		10.1	8.8		10.5	9.5	8.8		mps
	el GRA		Watts: 232		Shipping W				Mo
Voltage	120	-1 32 208	240	100	200	220	240	- L	/oltage
Amps	120	200 11.2	240 9.7		200 11.6	10.5	240 9.7		mps
									•
	el GRA		Watts: 25		Shipping W	-			Mo
Voltage	120	208	240	100	200	220	240		/oltage
Amps		12.3	10.6		12.8	11.6	10.6		Amps

GRAH MODELS-ELECTRICAL RATING CHART

Mode		H-18	Watts: 350		Shipping We	eight: 6 lbs.	(3 kg)	
Voltage	120	208		100		220 ♦	(° Ng) 240♦	
Amps	2.9	1.7	1.5	3.5		1.6	1.5	
					Shipping We			
Voltage	120	208	240	100		220♦	(3 kg) 240♦	
Amps	4.2		2.1	5.0		2.3	2.1	
					Shipping We			
		208	240	100		220♦	(4 kg) 240♦	
Amps	5.5	3.2		6.6		220 ↓ 3.0		
			Watts: 800		Shipping We			
Voltage	120	208		100		220♦	(4 kg) 240♦	
Amps		3.8	3.3		4.0			
					Shipping We			
Voltage	120	-42 208		100		220♦	240♦	
Amps		4.6		9.5		4.3		
					4.0 Shipping We			
Voltage	120	1-48 208		100		220♦	240◆	
Amps	9.2	5.3			5.5		240 ↓ 4.6	
· ·					Shipping We			
		208		, 100		220♦	240♦	
Amps		6.0			6.3		240 ↓ 5.2	
					Shipping We			
Voltage	120	208		, 100		220♦	240♦	
-	11.7					6.4		
					Shipping We			
Voltage	120	208		, 100		220♦	240◆	
Amps		7.5			7.8		6.5	
					Shipping We			
Voltage		208		100		-	240♦	
Amps		8.3			8.6			
					Shipping Weight: 19 lbs. (9 kg)			
Voltage	120	208		100		220 ♦	240♦	
Amps	17.1	9.9	8.5			9.3	8.5	
					Shipping We			
Voltage	120	208		100		220♦	240♦	
Amps	18.3	11.5			12.0		10.0	
					Shipping We		s. (10 kg)	
Voltage	120	208		100		220	240	
		200						
Amps	20.8	12.0		25.0	12.5	11.4	10.4	
1.5	20.8	12.0	10.4					
1.5	20.8	12.0	10.4 Watts: 2800		Shipping We			
Mode	20.8	12.0 I-120•† * 208	10.4 Watts: 2800 240) 100	Shipping We 200	eight: 26 lbs	s. (12 kg) 240	
Mode Voltage Amps	20.8 I GRAH 120 	12.0 I-120•† * 208 13.5	10.4 Watts: 2800 240 11.7) 100 	Shipping We 200	eight: 26 lbs 220 12.7	s. (12 kg) 240 11.7	
Mode Voltage Amps	20.8 I GRAH 120 	12.0 I-120•† * 208 13.5	10.4 Watts: 2800 240 11.7 Watts: 3120) 100 	Shipping We 200 14.0 Shipping We	eight: 26 lbs 220 12.7	s. (12 kg) 240 11.7	
Mode Voltage Amps Mode	20.8 GRAH 120 GRA	12.0 I-120• †* 208 13.5 H-132 †*	10.4 Watts: 2800 240 11.7 Watts: 3120 240) 100) 100	Shipping We 200 14.0 Shipping We	eight: 26 lbs 220 12.7 eight: 30 lbs 220	s. (12 kg) 240 11.7 s. (14 kg)	
Mode Voltage Amps Mode Voltage Amps	20.8 I GRAH 120 I GRAI 120 	12.0 1-120•†* 208 13.5 H-132†* 208 15.0	10.4 Watts: 2800 240 11.7 Watts: 3120 240 13.0) 100) 100 	Shipping We 200 14.0 Shipping We 200 15.6	eight: 26 lbs 220 12.7 eight: 30 lbs 220 14.2	s. (12 kg) 240 11.7 s. (14 kg) 240 13.0	
Mode Voltage Amps Mode Voltage Amps	20.8 I GRAH 120 I GRAI 120 	12.0 1-120•†* 208 13.5 H-132†* 208 15.0	10.4 Watts: 2800 240 11.7 Watts: 3120 240 13.0 Watts: 3450) 100 100 	Shipping We 200 14.0 Shipping We 200 15.6 Shipping We	eight: 26 lbs 220 12.7 eight: 30 lbs 220 14.2 eight: 33 lbs	s. (12 kg) 240 11.7 s. (14 kg) 240 13.0	
Mode Voltage Amps Mode Voltage Amps Mode	20.8 1 GRAH 120 120 120 120 120 120	12.0 1-120•†* 208 13.5 H-132†* 208 15.0 H-144†* 208	10.4 Watts: 2800 240 11.7 Watts: 3120 240 13.0 Watts: 3450 240	100 100 100 100	Shipping We 200 14.0 Shipping We 200 15.6 Shipping We	eight: 26 lbs 220 12.7 eight: 30 lbs 220 14.2 eight: 33 lbs 220	s. (12 kg) 240 11.7 s. (14 kg) 240 13.0 s. (15 kg) 240	

The electrical information in the shaded area pertains to Export Models only.

• 100 and 120 volt models with infinite switch require tandem (end-to-end) elements, consult factory for applications.

100 and 120 volt models may require additional switches, consult factory for applications.

†Glo-Ray models 108" through 144" and 120 volt models of GRA-84 and GRA-96 contain tandem (end-to-end) elements may be individually controlled.

* Not available in 100 or 120 volts.

•CE approved units for 220-230 volt utilize a 220 volt heating system; 230-240 CE units utilize a 240 volt heating system.

SPECIFICATIONS

GRAL MODELS-ELECTRICAL RATING CHART

Mode	el GR/	AL-18	Watts: 370		Shipping We	ight: 9 lbs	. (4 kg)
Voltage	120	120/208	120/240	100	100/200	220 ♦	240 �
Amps	3.1	2.2	2.0	3.7	2.5	1.7	1.5
Mod	el GR/	AL-24	Watts: 470		Shipping We	ight: 10 lb	s. (5 kg)
/oltage	120	120/208	120/240	100	100/200	220 ♦	240 ♦
Amps	3.9	2.7	2.5	4.7	3.0	2.1	2.0
Mode	el GR/	AL-30	Watts: 570		Shipping We	ight: 11 lb:	s. (5 kg)
Voltage	120	120/208	120/240	100	100/200	220 🔶	240 ♦
Amps	4.8	3.2	2.9	5.7	3.5	2.6	2.4
Mode	el GR/	AL-36	Watts: 755		Shipping We	ight: 13 lb	s. (6 kg)
/oltage	120	120/208	120/240	100		220 ♦	240 ♦
Amps	6.3	4.3	3.9	7.6	4.7	3.4	3.1
Mode	el GR/	AL-42	Watts: 855		Shipping We	ight: 15 lb	s. (7 kg)
/oltage	120	120/208	120/240	100	100/200	220 🔶	240 ♦
Amps	7.1	4.7	4.3	8.6	5.2	3.9	3.6
		AL-48	Watts: 1040		Shipping We	-	
Voltage		120/208	120/240	100			240 ♦
Amps	8.7	5.8	5.3	10.4	6.4	4.7	4.3
Mode		AL-54	Watts: 1165		Shipping We	-	
Voltage	120		120/240	100			240 ♦
Amps	9.7	6.4	5.9	11.7		5.3	4.9
	el GR/		Watts: 1350		Shipping We	-	
/oltage	120	120/208	120/240	100		220♦	240♦
mps		7.5	6.9	13.5		6.1	5.6
		AL-66			Shipping We	•	
/oltage	120			100	100/200	220♦	240♦
mps	12.2	8.1	7.3	14.6		6.6	6.1
		AL-72	Watts: 1638		Shipping We		
/oltage	120		120/240	100	100/200		240♦
mps	13.6	9.1	8.3	16.4	10.0	7.4	6.8
			Watts: 1920		Shipping We	-	
/oltage	120		120/240	100		220♦	240♦
Amps		10.7	9.8	19.2			8.0
					Shipping We	-	
/oltage	120		120/240	100		220 ♦	240♦
Amps	18.4	12.3	11.2	22.1		10.0	9.2
			Watts: 2390		Shipping We		
Voltage	120		120/240 12.2	100 23.9	100/200 14.7	220 10.9	240 10.0
Amps	19.9	13.4					
Mode /oltage	el GRA 120		Watts: 2700 120/240		Shipping We 100/200	ight: 40 lb 220	s. (18 kg) 240
Amps	120	120/208	120/240		100/200		240 11.3
•					Shipping We		
/oltage	120 ar		120/240	100	100/200	220 220	s. (20 kg) 240
Amps		120/208	120/240	100	100/200	13.5	240 12.4
· ·)	Shipping We		
Voltage	120 ar	-	120/240	100		220 220	s. (22 kg) 240
Amps		120/208	120/240		20.0	220 14.9	240 13.6
, anpo		10.0	10.0		20.0	14.5	10.0

GRAHL MODELS-ELECTRICAL RATING CHART

Mode		LI _10	Watts: 470		Shipping We	ight: 0 lbc	(4 kg)
Voltage	120	120/208		100		220 ♦	(4 kg) 240♦
Amps	3.9	2.7	2.5	4.7	3.0	220 ↓ 2.1	240 ↓ 2.0
•				4.7			
			Watts: 620	400	Shipping We	°	(0)
Voltage	120	120/208		100	100/200	220♦	240♦
Amps	5.2	3.4	3.1	6.2	3.7	2.8	2.6
		HL-30	Watts: 780		Shipping We		
Voltage	120	120/208		100		220♦	240♦
Amps	6.5	4.2	3.8	7.8	4.5	3.5	3.3
Mode		HL-36			Shipping We		1 27
Voltage	120	120/208	120/240	100	100/200	220♦	240♦
Amps	8.2	5.3	4.8	9.8	5.8	4.5	4.1
Mode	el GRA	HL-42	Watts: 1130		Shipping We	ight: 15 lbs	. (7 kg)
Voltage	120	120/208	120/240	100	100/200	220♦	240♦
Amps	9.4	6.1	5.5	11.3	6.6	5.1	4.7
Mode	el GRA	HL-48	Watts: 1340		Shipping We	ight: 17 lbs	. (8 kg)
Voltage	120	120/208	120/240	100	100/200	220♦	240♦
Amps	11.2	7.3	6.6	13.4	7.9	6.1	5.6
Mode	el GRA	HL-54	Watts: 1490		Shipping We	ight: 19 lbs	. (9 kg)
Voltage	120	120/208	120/240	100	100/200	220♦	240♦
Amps	12.4	8.0	7.2	14.9	8.7	6.8	6.2
Mode	el GRA	HL-60	Watts: 1700		Shipping We	. (10 kg)	
Voltage	120	120/208	120/240	100	100/200	220♦	240♦
Amps	14.2	9.2	8.3	17.0	10.0	7.7	7.1
Mode	el GRA	HL-66•∎	Watts: 1860		Shipping We	ight: 22 lbs	. (10 kg)
Voltage	120	120/208	120/240	100	100/200	220♦	240♦
Amps	15.5	10.0	9.0	18.6	10.8	8.5	7.8
Mode	el GRA	HL-72•■	Watts: 2085		Shipping We	ight: 24 lbs	. (11 kg)
Voltage	120	120/208	120/240	100	100/200	220♦	240♦
Amps	17.4	11.3	10.2	20.9	12.2	9.5	8.7
Mode	el GRA	HL-84•■	Watts: 2470		Shipping We	ight: 28 lbs	. (13 kg)
Voltage	120	120/208	120/240				
Amps			120/240	100	100/200	220♦	240♦
	20.6	13.4	120/240	100 24.7			
Mode		13.4	12.0	24.7		220♦ 11.2	240♦ 10.3
Mode Voltage		13.4	12.0 Watts: 2880	24.7	14.5 Shipping We	220♦ 11.2	240♦ 10.3
	el GRA	13.4 HL-96∙∎	12.0 Watts: 2880	24.7	14.5 Shipping We 100/200	220♦ 11.2 ight: 32 lbs	240♦ 10.3 . (15 kg)
Voltage Amps	el GRA 120 24.0	13.4 HL-96•■ 120/208 15.5	12.0 Watts: 2880 120/240 14.0	24.7 100 28.8	14.5 Shipping We 100/200	220♦ 11.2 ight: 32 lbs 220♦ 13.1	240♦ 10.3 . (15 kg) 240♦ 12.0
Voltage Amps	el GRA 120 24.0	13.4 HL-96•■ 120/208 15.5	12.0 Watts: 2880 120/240 14.0 Watts: 3040	24.7 100 28.8	14.5 Shipping We 100/200 16.8 Shipping We	220♦ 11.2 ight: 32 lbs 220♦ 13.1	240♦ 10.3 . (15 kg) 240♦ 12.0
Voltage Amps Mode	24.0 El GRA	13.4 HL-96•■ 120/208 15.5 HL-108†	12.0 Watts: 2880 120/240 14.0 Watts: 3040	24.7 100 28.8	14.5 Shipping Wei 100/200 16.8 Shipping Wei 100/200	220♦ 11.2 ight: 32 lbs 220♦ 13.1 ight: 36 lbs	240♦ 10.3 . (15 kg) 240♦ 12.0 . (16 kg)
Voltage Amps Mode Voltage Amps	el GRA 120 24.0 el GRA 120 24.8	13.4 HL-96•■ 120/208 15.5 HL-108† 120/208 16.5	12.0 Watts: 2880 120/240 14.0 Watts: 3040 120/240 14.9	24.7 100 28.8 100 30.4	14.5 Shipping We 100/200 16.8 Shipping We 100/200 17.9	220 ↓ 11.2 ight: 32 lbs 220 ↓ 13.1 ight: 36 lbs 220 13.8	240 ◆ 10.3 . (15 kg) 240 ◆ 12.0 . (16 kg) 240 12.7
Voltage Amps Mode Voltage Amps	el GRA 120 24.0 el GRA 120 24.8	13.4 HL-96•■ 120/208 15.5 HL-108† 120/208 16.5 HL-120†	12.0 Watts: 2880 120/240 14.0 Watts: 3040 120/240 14.9 * Watts: 3400	24.7 100 28.8 100 30.4	14.5 Shipping We 100/200 16.8 Shipping We 100/200 17.9 Shipping We	220 ↓ 11.2 ight: 32 lbs 220 ↓ 13.1 ight: 36 lbs 220 13.8	240 ◆ 10.3 . (15 kg) 240 ◆ 12.0 . (16 kg) 240 12.7
Voltage Amps Voltage Amps Mode	el GRA 120 24.0 el GRA 120 24.8 el GRA	13.4 HL-96•■ 120/208 15.5 HL-108† 120/208 16.5 HL-120†	12.0 Watts: 2880 120/240 14.0 Watts: 3040 120/240 14.9	24.7 100 28.8 100 30.4) 100	14.5 Shipping We 100/200 16.8 Shipping We 100/200 17.9 Shipping We 100/200	220♦ 11.2 ight: 32 lbs 220♦ 13.1 ight: 36 lbs 220 13.8 ight: 40 lbs	240 ◆ 10.3 . (15 kg) 240 ◆ 12.0 . (16 kg) 240 12.7 . (18 kg)
Voltage Amps Voltage Amps Voltage Amps	el GRA 120 24.0 el GRA 120 24.8 el GRA 120 120 	13.4 HL-96•■ 120/208 15.5 HL-108† 120/208 16.5 HL-120† ³ 120/208 18.5	12.0 Watts: 2880 120/240 14.0 Watts: 3040 120/240 14.9 * Watts: 3400 120/240 16.7	24.7 100 28.8 100 30.4) 100 	14.5 Shipping We 100/200 16.8 Shipping We 100/200 17.9 Shipping We 100/200 20.0	220 ◆ 11.2 ight: 32 lbs 220 ◆ 13.1 ight: 36 lbs 220 13.8 ight: 40 lbs 220 15.5	240 ◆ 10.3 . (15 kg) 240 ◆ 12.0 . (16 kg) 240 12.7 . (18 kg) 240 14.2
Voltage Amps Voltage Amps Voltage Amps Mode	el GRA 120 24.0 el GRA 120 24.8 el GRA 120 el GRA	13.4 HL-96-= 120/208 15.5 HL-108† 120/208 16.5 HL-120† 120/208 18.5 HL-132†	12.0 Watts: 2880 120/240 14.0 Watts: 3040 120/240 14.9 * Watts: 3400 120/240 16.7 * Watts: 3780	24.7 100 28.8 100 30.4 100 	14.5 Shipping We 100/200 16.8 Shipping We 100/200 20.0 Shipping We Shipping We	220 ↓ 11.2 ight: 32 lbs 220 ↓ 13.1 ight: 36 lbs 220 13.8 ight: 40 lbs 220 15.5 ight: 44 lbs	240 ◆ 10.3 . (15 kg) 240 ◆ 12.0 . (16 kg) 240 12.7 . (18 kg) 240 14.2 . (20 kg)
Voltage Amps Voltage Amps Voltage Voltage Amps Voltage	el GRA 120 24.0 el GRA 120 24.8 el GRA 120 120 120	13.4 HL-96-= 120/208 15.5 HL-108† 120/208 16.5 HL-120† 120/208 18.5 HL-132† 120/208	12.0 Watts: 2880 120/240 14.0 Watts: 3040 120/240 14.9 * Watts: 3400 120/240 16.7 * Watts: 3780 120/240	24.7 100 28.8 100 30.4) 100 	14.5 Shipping We 100/200 16.8 Shipping We 100/200 20.0 Shipping We 100/200 Shipping We 100/200	220 ↓ 11.2 ight: 32 lbs 220 ↓ 13.1 ight: 36 lbs 220 13.8 ight: 40 lbs 220 15.5 ight: 44 lbs 220	240 ◆ 10.3 . (15 kg) 240 ◆ 12.0 . (16 kg) 240 12.7 . (18 kg) 240 14.2 . (20 kg) 240
Voltage Amps Voltage Amps Voltage Voltage Amps Voltage Voltage Amps	el GRA 120 24.0 el GRA 120 24.8 el GRA 120 120 	13.4 HL-96-= 120/208 15.5 HL-108† 120/208 16.5 HL-120† 120/208 18.5 HL-132† 120/208 20.5	12.0 Watts: 2880 120/240 14.0 Watts: 3040 120/240 14.9 * Watts: 3400 120/240 16.7 * Watts: 3780 120/240 18.5	24.7 100 28.8 100 30.4) 100 	14.5 Shipping We 100/200 16.8 Shipping We 100/200 20.0 Shipping We 100/200 20.0 Shipping We 100/200 21.6	220 ◆ 11.2 ight: 32 lbs 220 ◆ 13.1 ight: 36 lbs 220 13.8 ight: 40 lbs 220 15.5 ight: 44 lbs 220 17.2	240 10.3 240 12.0 (16 kg) 240 12.7 (18 kg) 240 14.2 (20 kg) 240 15.8
Voltage Amps Voltage Amps Voltage Amps Voltage Voltage Amps Mode	El GRA 120 24.0 El GRA 120 24.8 El GRA 120 El GRA 120 El GRA	13.4 HL-96-= 120/208 15.5 HL-108† 120/208 16.5 HL-120† 120/208 18.5 HL-132† 120/208 20.5 HL-144†	12.0 Watts: 2880 120/240 14.0 Watts: 3040 120/240 14.9 * Watts: 3400 120/240 16.7 * Watts: 3780 120/240 18.5 * Watts: 4170	24.7 100 28.8 100 30.4 100 	14.5 Shipping We 100/200 16.8 Shipping We 100/200 20.0 Shipping We 100/200 21.6 Shipping We	220 ◆ 11.2 ight: 32 lbs 220 ◆ 13.1 ight: 36 lbs 220 13.8 ight: 40 lbs 220 15.5 ight: 44 lbs 220 17.2 ight: 48 lbs	240 ◆ 10.3 . (15 kg) 240 ◆ 12.0 . (16 kg) 240 12.7 . (18 kg) 240 14.2 . (20 kg) 240 15.8 . (22 kg)
Voltage Amps Voltage Amps Voltage Amps Voltage Voltage Voltage Amps	el GRA 120 24.0 el GRA 120 24.8 el GRA 120 120 	13.4 HL-96-= 120/208 15.5 HL-108† 120/208 16.5 HL-120† 120/208 18.5 HL-132† 120/208 20.5 HL-144† 120/208	12.0 Watts: 2880 120/240 14.0 Watts: 3040 120/240 14.9 * Watts: 3400 120/240 16.7 * Watts: 3780 120/240 18.5 * Watts: 4170 120/240	24.7 100 28.8 100 30.4) 100 	14.5 Shipping We 100/200 16.8 Shipping We 100/200 20.0 Shipping We 100/200 21.6 Shipping We 100/200	220 ◆ 11.2 ight: 32 lbs 220 ◆ 13.1 ight: 36 lbs 220 13.8 ight: 40 lbs 220 15.5 ight: 44 lbs 220 17.2 ight: 48 lbs 220	240 10.3 240 12.0 (16 kg) 240 12.7 (18 kg) 240 14.2 (20 kg) 240 15.8

The electrical information in the shaded area pertains to **Export Models** only.

• 100 and 120 volt models with infinite switch may require tandem (end-to-end) elements, consult factory for applications.

100 and 120 volt models may require additional switches, consult factory for applications.

[†]Glo-Ray models 108" through 144" and 100 and 120 volt models of GRAL-84 and GRAL-96 contain tandem (end-to-end) elements that may be individually controlled.

* Not available in 100 or 120 volts.

◆CE approved units for 220-230 volt utilize a 220 volt heating system; 230-240 CE units utilize a 240 volt heating system.

NOTE: GRAL & GRAHL Models that have multiple voltages listed, such as 120/208, 120/240 or 100/200, have multiple circuits. For example a 120/208 volt unit utilizes 120 volts for light circuit and 208 volts for the heat circuit(s). Consult Electrical Diagram supplied with the unit for specific information.

⚠ CAUTION - Strip Heaters with incandescent lights that require a circuit breaker larger than 20 amps must have a separate circuit breaker for the incandescent lights that is 20 amps or less.

Form No. GRM-0707

GRAH-XXD MODELS-

ELECTRICAL RATING CHART

GRA-XXD MODELS-ELECTRICAL RATING CHART

Mod	del GRA	-18D	Watts: 500)	Shipping W	eight: 14 lbs	s. (6 kg)	Mod	lel GRA	H-18D	Watts:	700	Shipping W	eight: 14 lb	s. (6 kg)
Voltage	120	208	240	100	200	220 ♦	240 ♦	Voltage	120	208	240	100	200	220 ♦	240
Amps	4.2	2.4	2.1	5.0	2.5	2.3	2.1	Amps	5.8	3.4	2.9	7.0	3.5	3.2	2.9
Mod	del GRA	-24D	Watts: 700)	Shipping W	eight: 16 lbs	s. (7 kg)	Mod	lel GRA	H-24D	Watts:	1000	Shipping W	eight: 16 lb	s. (7 kg)
Voltage	120	208	240	100	200	220♦	240♦	Voltage	120	208	240	100	200	220♦	240
Amps	5.8	3.4	2.9	7.0	3.5	3.2	2.9	Amps	8.3	4.8	4.2	10.0	5.0	4.5	4.2
Mod	lel GRA	-30D	Watts: 900)	Shipping W	eight: 18 lbs	. (8 kg)	Mod	lel GRA	H-30D	Watts:	1320	Shipping W	eight: 18 lb	s. (8 kg)
Voltage	120	208	240	100	200	220♦	240♦	Voltage	120	208	240	100	200	220♦	240
Amps	7.5	4.3	3.8	9.0	4.5	4.1	3.8	Amps	11.0	6.3	5.5	13.2	6.6	6.0	5.5
Mod	lel GRA	-36D =	Watts: 115	0	Shipping W	eight: 21 lbs	s. (10 kg)	Mod	lel GRA	H-36D∎	Watts:	1600	Shipping W	eight: 21 lb	s. (10 kg
Voltage	120	208	240	100	200	220♦	240♦	Voltage	120	208	240	100	200	220♦	240♦
Amps	9.6	5.5	4.8	11.5	5.8	5.2	4.8	Amps	13.3	7.7	6.7	16.0	8.0	7.3	6.7
Mod	lel GRA	-42D =	Watts: 135	0	Shipping W	eight: 24 lbs	. (11 ka)	Mod	lel GRA	H-42D∎	Watts:	1900	Shipping W	eight: 24 lb	s. (11 ka
Voltage	120	208	240	100	200	220	240♦	Voltage	120	208	240	100	200	220♦	240♦
Amps	11.3	6.5	5.6	13.5	6.8	6.1	5.6	Amps	15.8	9.1	7.9	19.0	9.5	8.6	7.9
Mod	lel GRA	-48D =	Watts: 160	0	Shipping W	eight: 27 lbs	. (12 kg)	Mod	lel GRA	H-48D =	Watts:	2200	Shipping W	eight: 27 lb	s. (12 ka
Voltage	120	208	240	100	200	220♦	240♦	Voltage	120	208	240	100	200	220♦	240♦
Amps	13.3	7.7	6.7	16.0	8.0	7.3	6.7	Amps	18.3	10.6	9.2	22.0	11.0	10.0	9.2
Mod	lel GRA	-54D =	Watts: 185	0	Shippina W	eight: 30 lbs	. (14 ka)		lel GRA	H-54D∎	Watts:	2500	Shipping W	eight: 30 lb	s. (14 km
Voltage	120	208	240	100	200	220♦	240♦	Voltage	120	208	240	100	200	220♦	240♦
Amps	15.4	8.9	7.7	18.5	9.3	8.4	7.7	Amps	20.8	12.0	10.4	25.0	12.5	11.4	10.4
Mod	lel GRA		Watts: 210			eight: 34 lbs			lel GRA	-	Watts:		Shipping W		-
Voltage	120	208	240	100	200	220♦	240♦	Voltage	120	208	240	100	200	220♦	240♦
Amps	17.5	10.1	8.8	21.0	10.5	9.5	8.8	Amps	23.3	13.5	11.7	28.0	14.0	12.7	11.7
	lel GRA		Watts: 232			eight: 37 lbs				H-66D•			Shipping W		
Voltage	120	208	240	100	200	220♦	240 ♦	Voltage	120	208	240	100	200	220♦	240♦
Amps	19.3	11.2	9.7	23.2	11.6	10.5	9.7	Amps	26.0	15.0	13.0	31.2	15.6	14.2	13.0
•	lel GRA		Watts: 255			eight: 41 lbs		1.1		H-72D•■			Shipping W		
Voltage	120	208	240	100	200	220♦	240♦	Voltage	120	208	240	100	200	220♦	240♦
Amps	21.3	12.3	10.6	25.5	12.8	11.6	10.6	Amps	28.8	16.6	14.4	34.5	17.3	15.7	14.4
•	lel GRA	-	Watts: 300			eight: 44 lbs				H-84D†			Shipping W		
Voltage	120	208	240	100	200	220♦	240♦	Voltage	120	208	240	100	200	220♦	5. (20 kg 240♦
Amps	25.0	14.4	12.5	30.0	15.0	13.6	12.5	Amps	34.2	19.7	17.1	41.0	200	18.6	17.1
	lel GRA		Watts: 345			eight: 52 lbs				H-96D+			Shipping W		
Voltage	120	208	240	100	200	220 ♦	240♦	Voltage	120	208	240	100	200	220♦	240♦
Amps	28.8	16.6	14.4	34.5	17.3	15.7	14.4	Amps	40.0	200	20.0	48.0	24.0	21.8	20.0
			Watts: 370			eight: 59 lbs		· ·		H-108D			Shipping W		
Voltage	120	208	240	100	200	220	240	Voltage	120 120	208	= vvalis. 240	100	200	220	5. (27 kg 240
Amps	30.8	17.8	15.4	37.0	18.5	16.8	15.4	Amps	41.7	200	240	50.0	200	22.7	240
•		-	Watts: 420			eight: 66 lbs		- P -		H-120D			Shipping W		
Voltage	120	208	240	100	200	220	240	Voltage	120 120	ן בט21-ח . 208	240	100	200	220	s. (30 kg 240
Amps		200	17.5		200	19.1	17.5	Amps		208	240		200	220	240
•			Watts: 464	0		eight: 73 lbs				H-132D			Shipping W		
Voltage	120	208	240	100	200	220	240		120 120	208		100	200	220	s. (33 кg 240
-	120	208	240 19.3		200	220	240 19.3	Voltage	120	208 30.0	240	100		220 28.4	
Amps								Amps			26.0		31.2	-	26.0
			Watts: 510			eight: 80 lbs				H-144D†			Shipping W	-	
Voltage	120	208	240	100	200	220	240	Voltage	120	208	240	100	200	220	240
Amps		24.5	21.3		25.5	23.2	21.3	Amps		33.2	28.8		34.5	31.4	28.8

The electrical information in the shaded area pertains to **Export Models** only.

• 100 and 120 volt models with infinite switch may require tandem (end-to-end) elements, consult factory for applications.

100 and 120 volt models may require additional switches, consult factory for applications.

†Glo-Ray models 108" through 144" and 100 and 120 volt models of GRA-84 and GRA-96 contain tandem (end-to-end) elements that may be individually controlled.

* Not available in 100 or 120 volts.

SPECIFICATIONS

GRAL-XXD MODELS-ELECTRICAL RATING CHART

Mod	el GRA	L-18D	Watts: 62	20	Shipping We	ight: 14 lb:	s. (6 kg)
Voltage	120	120/208	120/240	100	100/200	220 ♦	240 ♦
Amps	5.2	3.4	3.1	6.2	3.7	2.8	2.6
Mod	el GRA	L-24D	Watts: 82	20	Shipping We	ight: 16 lb:	s. (7 kg)
Voltage	120	120/208	120/240	100	100/200	220♦	240♦
Amps	6.8	4.4	3.9	8.2	4.7	3.7	3.4
Mod	el GRA	L-30D	Watts: 10	020	Shipping We	ight: 19 lb:	s. (9 kg)
Voltage	120	120/208	120/240	100	100/200	220♦	240♦
Amps	8.5	5.3	4.8	10.2	5.7	4.6	4.3
Mod	el GRA	L-36D	Watts: 13	330	Shipping We	ight: 22 lb:	s. (10 kg)
Voltage	120	120/208	120/240	100	100/200	220♦	240♦
Amps	11.1	7.0	6.3	13.3	7.6	6.0	5.5
Mod	el GRA	L-42D	Watts: 15	530	Shipping We	ight: 25 lb	s. (11 kg)
Voltage	120	120/208	120/240	100	100/200	220♦	240♦
Amps	12.8	8.0	7.1	15.3	8.6	7.0	6.4
Mod	el GRA	L-48D∎	Watts: 18	340	Shipping We	ight: 29 lb	s. (13 kg)
Voltage	120	120/208	120/240	100	100/200	220♦	240♦
Amps	15.3	9.7	8.7	18.4	10.4	8.4	7.7
Mod	el GRA	L-54D=	Watts: 20	090	Shipping We	ight: 33 lb	s. (15 kg)
Voltage	120	120/208	120/240	100	100/200	220♦	240♦
Amps	17.4	10.9	9.7	20.9	11.7	9.5	8.7
Mod	el GRA	L-60D=	Watts: 24	400	Shipping We	ight: 37 lb	s. (17 kg)
Voltage	120	120/208	120/240	100	100/200	220♦	240♦
Amps	20.0	12.6	11.3	24.0	12.9	10.9	10.0
Mod	el GRA	L-66D∎	Watts: 26	520	Shipping We	ight: 40 lb:	s. (18 kg)
Voltage	120	120/208	120/240	100	100/200	220♦	240♦
Amps	21.8	13.7	12.2	26.2	14.6	11.9	10.9
Mod	el GRA	L-72D∎	Watts: 29	910	Shipping We	ight: 42 lb:	s. (19 kg)
Voltage	120	120/208	120/240	100	100/200	220♦	240♦
Amps	24.3	15.3	13.6	29.1	16.4	13.2	12.1
Mod	el GRA	L-84D•■	Watts: 34	120	Shipping We	ight: 47 lb	s. (21 kg)
Voltage	120	120/208	120/240	100	100/200	220♦	240♦
Amps	28.5	17.9	16.0	34.2	19.2	15.5	14.3
Mod	el GRA	L-96D•∎	Watts: 39	930	Shipping We	ight: 56 lb	s. (25 kg)
Voltage	120	120/208	120/240	100	100/200	220♦	240♦
Amps	32.8	20.6	18.4	39.3	22.1	17.9	16.4
Mod	el GRA	L-108D†	 Watts: 42 	240	Shipping We	ight: 64 lb	s. (29 kg)
	120	120/208	120/240	100	100/200	220♦	240♦
Voltage					23.9	40.0	17.7
Voltage Amps	35.3	22.3	19.9	42.4	23.9	19.3	17.7
Amps			19.9 * Watts: 48		Shipping We		
Amps		L-120D†					
Amps Mod	el GRA	L-120D†	Watts: 48	300	Shipping We	ight: 72 lb:	s. (33 kg)
Amps Mod Voltage Amps	el GRA 120 	L -120D †* 120/208 25.2	* Watts: 48 120/240	300 100 	Shipping We 100/200	ight: 72 lb 220♦ 21.8	s. (33 kg) 240♦ 20.0
Amps Mod Voltage Amps	el GRA 120 	L -120D †* 120/208 25.2	* Watts: 44 120/240 22.5	300 100 	Shipping We 100/200 27.0	ight: 72 lb 220♦ 21.8	s. (33 kg) 240♦ 20.0
Amps Mode Voltage Amps Mode	el GRA 120 el GRA	L-120D†* 120/208 25.2 L-132D†*	* Watts: 44 120/240 22.5 * Watts: 53	300 100 300	Shipping We 100/200 27.0 Shipping We	ight: 72 lb: 220♦ 21.8 ight: 79 lb:	s. (33 kg) 240♦ 20.0 s. (36 kg)
Amps Mode Voltage Amps Voltage Amps	el GRA 120 el GRA 120 	L-120D† ³ 120/208 25.2 L-132D† ³ 120/208 27.8	* Watts: 44 120/240 22.5 *■ Watts: 53 120/240	300 100 300 100 	Shipping We 100/200 27.0 Shipping We 100/200	ight: 72 lbs 220♦ 21.8 ight: 79 lbs 220♦ 24.1	s. (33 kg) 240♦ 20.0 s. (36 kg) 240♦ 22.1
Amps Mode Voltage Amps Voltage Amps	el GRA 120 el GRA 120 	L-120D† ³ 120/208 25.2 L-132D† ³ 120/208 27.8	* Watts: 44 120/240 22.5 * Watts: 53 120/240 24.8	300 100 300 100 	Shipping We 100/200 27.0 Shipping We 100/200 29.8	ight: 72 lbs 220♦ 21.8 ight: 79 lbs 220♦ 24.1	s. (33 kg) 240♦ 20.0 s. (36 kg) 240♦ 22.1

GRAHL-XXD MODELS-ELECTRICAL RATING CHART

Mode	el GRA	HL-18D	Watts: 82	20	Shipping We	eight: 14 lb:	s. (6 kg)
Voltage	120	120/208	120/240	100	100/200	220 ♦	240 ♦
Amps	6.8	4.4	3.9	8.2	4.7	3.7	3.4
Mode	el GRA	HL-24D	Watts: 1	120	Shipping We	ight: 16 lb	s. (7 kg)
Voltage	120	120/208	120/240	100	100/200	220♦	240♦
Amps	9.3	5.8	5.2	11.2	6.2	5.1	4.7
Mode	el GRA	HL-30D	Watts: 14	140	Shipping We	iaht: 19 lb:	s. (9 ka)
Voltage	120	120/208	120/240	100	100/200	220♦	240♦
Amps	12.0	7.3	6.5	14.4		6.5	6.0
•		HL-36D=	Watts: 17	780	Shipping We	eight: 22 lb	s. (10 kg)
Voltage	120	120/208	120/240	100		220♦	240♦
Amps	14.8	9.2	8.2	17.8	9.8	8.1	7.4
Mode	el GRA	HL-42D=	Watts: 20	080	Shipping We	iaht: 25 lb:	s. (11 ka)
Voltage	120	120/208		100		220♦	240♦
Amps	17.3	10.6	9.4	20.8	11.3	9.5	8.7
Mode	el GRA	HL-48D=	Watts: 24	140	Shipping We	ight: 29 lb:	s. (13 kg)
Voltage	120	120/208	120/240	100	100/200	220♦	240♦
Amps	20.3	12.6	11.2	24.4	13.4	11.1	10.2
Mode	el GRA	HL-54D	Watts: 2	740	Shipping We	ight: 33 lb	s. (15 kg)
Voltage	120	120/208	120/240	100		220♦	240♦
Amps	22.8	14.0	12.4	27.4	14.9	12.5	11.4
Mode	el GRA	HL-60D=	Watts: 3	100	Shipping We	ight: 37 lb:	s. (17 kg)
Voltage	120	120/208	120/240	100	100/200	220♦	240♦
Amps	25.8	16.0	14.2	31.0	17.0	14.1	12.9
Mode	el GRA	HL-66D•	Watts: 34	420	Shipping We	ight: 39 lb:	s. (18 kg)
Voltage	120	120/208	120/240	100	100/200	220♦	240♦
Amps	28.5	17.5	15.5	34.2	18.6	15.5	14.3
Mode	el GRA	HL-72D•	Watts: 38	310	Shipping We	ight: 42 lb	s. (19 kg)
Voltage	120	120/208	120/240	100	100/200	220♦	240♦
Amps	31.8	19.6	17.4	38.1	20.9	17.3	15.9
Mode	el GRA	HL-84D†	Watts: 4	520	Shipping We	ight: 47 lb	s. (21 kg)
Voltage	120	120/208	120/240	100	100/200	220♦	240♦
Amps	37.7	23.2	20.6	45.2	24.7	20.5	18.8
Mode	el GRA	HL-96D†	Watts: 52	280	Shipping We	ight: 56 lb	s. (25 kg)
Voltage	120	120/208	120/240	100	100/200	220♦	240♦
Amps	44.0	27.1	24.0	52.8	28.8	24.0	22.0
Mode	el GRA	HL-108D	■Watts: 5	540	Shipping We	ight: 64 lb	s. (29 kg)
Voltage	120	120/208	120/240	100	100/200	220♦	240♦
Amps	46.2	28.5	25.3	55.4	30.4	25.2	23.1
Mode	el GRA	HL-120D	* Watts: 6	200	Shipping We	ight: 72 lb	s. (33 kg)
Voltage	120	120/208	120/240	100	100/200	220♦	240♦
Amps		31.9	28.3		34.0	28.2	25.8
Mode	el GRA	L-132D+*	Watts: 69	900	Shipping We	ight: 79 lb	s. (36 kg)
Voltage	120	120/208	120/240	100	100/200	220♦	240♦
Amps		35.5	31.5		37.8	31.4	28.8
Mode	el GRA	L-144D+*	Watts: 76		Shipping We	ight: 86 lb	s. (39 kg)
Voltage	120	•	120/240	100		220♦	240♦
Amps		39.2	34.8		41.7	34.6	31.8

The electrical information in the shaded area pertains to **Export Models** only.

• 100 and 120 volt models with infinite switch may require tandem (end-to-end) elements, consult factory for applications.

100 and 120 volt models may require additional switches, consult factory for applications.

†Glo-Ray models 108" through 144" and 100 and 120 volt models of GRAL-84 and GRAL-96 contain tandem (end-to-end)

elements that may be individually controlled.

* Not available in 100 or 120 volts.

◆CE approved units for 220-230 volt utilize a 220 volt heating system; 230-240 CE units utilize a 240 volt heating system.

NOTE: GRAL & GRAHL Models that have multiple voltages listed, such as 120/208, 120/240 or 100/200, have multiple circuits. For example a 120/208 volt unit utilizes 120 volts for light circuit and 208 volts for the heat circuit(s). Consult Electrical Diagram supplied with the unit for specific information.

⚠ CAUTION - Strip Heaters with incandescent lights that require a circuit breaker larger than 20 amps must have a separate circuit breaker for the incandescent lights that is 20 amps or less.

GRN MODELS-ELECTRICAL RATING CHART

Mod	el GRN	-18	Watts: 250		Shipping W	eight: 6 lbs.	(3 kg)
Voltage	120	208	240	100	200	220 ♦	240 ♦
Amps	2.1	1.2	1.0	2.5	1.3	1.1	1.0
Mod	el GRN	-24	Watts: 350		Shipping Weight: 7 lbs. (3 kg)		
Voltage	120	208	240	100	200	220♦	240♦
Amps	2.9	1.7	1.5	3.5	1.8	1.6	1.5
Mod	el GRN	-30	Watts: 450		Shipping We	eight: 8 lbs.	(4 kg)
Voltage	120	208	240	100	200	220♦	240♦
Amps	3.8	2.2	1.9	4.5	2.3	2.1	1.9
Mod	el GRN	-36	Watts: 575		Shipping W	eight: 9 lbs.	(4 kg)
Voltage	120	208	240	100	200	220♦	240♦
Amps	4.8	2.8	2.4	5.8	2.9	2.6	2.1
Model GRN-42		Watts: 675		Shipping Weight: 10 lbs. (5 kg)			
Voltage	120	208	240	100	200	220♦	240♦
Amps	5.6	3.2	2.8	6.8	3.4	3.1	2.8
Mod	el GRN-	-48	Watts: 800		Shipping We	eight: 11 lbs	s. (5 kg)
Voltage	120	208	240	100	200	220♦	240♦
Amps	6.7	3.8	3.3	8.0	4.0	3.6	3.3
Mod	el GRN-	-54	Watts: 925		Shipping We	eight: 13 lbs	s. (6 kg)
Voltage	120	208	240	100	200	220♦	240♦
Amps	7.7	4.4	3.9	9.3	4.6	4.2	3.9
Mod	el GRN	-60	Watts: 1050)	Shipping We	eight: 14 lbs	s. (6 kg)
Voltage	120	208	240	100	200	220♦	240♦
Amps	8.8	5.0	4.4	10.5	5.3	4.8	4.4
Mod	el GRN	-66	Watts: 1160)	Shipping W	eight: 16 lbs	s. (7 kg)
Voltage	120	208	240	100	200	220♦	240♦
Amps	9.7	5.6	4.8	11.6	5.8	5.3	4.8
Mod	el GRN	-72	Watts: 1275		Shipping Weight: 17 lbs. (8 kg)		
Voltage	120	208	240	100	200	220♦	240♦
Amps	10.6	6.1	5.3	12.8	6.4	5.8	5.3

GRNH MODELS-ELECTRICAL RATING CHART

Mod	el GRN	H-18	Watts: 350		Shipping We	eight: 6 lbs	. (3 kg)
Voltage	120	208	240	100	200	220 ♦	240 ♦
Amps	2.9	1.7	1.5	3.5	1.8	1.6	1.5
Mod	el GRN	H-24	Watts: 500		Shipping We	eight: 7 lbs	. (3 kg)
Voltage	120	208	240	100	200	220♦	240♦
Amps	4.2	2.4	2.1	5.0	2.5	2.3	2.1
Mod	el GRN	H-30	Watts: 660		Shipping We	eight: 8 lbs	. (4 kg)
Voltage	120	208	240	100	200	220♦	240♦
Amps	5.5	3.2	2.8	6.6	3.3	3.0	2.8
Mod	el GRN	H-36	Watts: 800		Shipping We	eight: 9 lbs	. (4 kg)
Voltage	120	208	240	100	200	220♦	240♦
Amps	6.7	3.8	3.3	8.0	4.0	3.6	3.3
Mod	Model GRNH-42		Watts: 950		Shipping Weight: 10 lbs. (5 kg)		
Voltage	120	208	240	100	200	220♦	240♦
Amps	7.9	4.6	4.0	9.5	4.8	4.3	4.0
Mod	Model GRNH-48		Watts: 1100)	Shipping We	eight: 11 lb	s. (5 kg)
Voltage	120	208	240	100	200	220♦	240♦
Amps	9.2	5.3	4.6	11.0	5.5	5.0	4.6
Mod	el GRN	H-54	Watts: 1250		Shipping Weight: 13 lbs. (6 kg)		
Voltage	120	208	240	100	200	220♦	240♦
Amps	10.4	6.0	5.2	12.5	6.3	5.7	5.2
Mod	el GRN	H-60	Watts: 1400)	Shipping We	eight: 14 lb	s. (6 kg)
Voltage	120	208	240	100	200	220♦	240♦
Amps	11.7	6.7	5.8	14.0	7.0	6.4	5.8
Model GRNH-66*		Watts: 1560		Shipping Weight: 16 lbs. (7 kg)			
Voltage	120	208	240	100	200	220♦	240♦
Amps	13.0	7.5	6.5	15.6	7.8	7.1	6.5
Mod	el GRN	H-72*	Watts: 1725		Shipping Weight: 17 lbs. (8 kg)		
Voltage	120	208	240	100	200	220♦	240♦
Amps	14.4	8.3	7.2	17.3	8.6	7.8	7.2

The electrical information in the shaded area pertains to **Export Models** only.

 * 120 volt models not available for use with remote infinite switches.

•CE approved units for 220-230 volt utilize a 220 volt heating system; 230-240 CE units utilize a 240 volt heating system.

SPECIFICATIONS

DIMENSIONS

Models	Width	Depth	Depth	Height
	(A)	(B)	(C)	(D)
GR &	24" - 96"	6"	23"	2-1/2"
GRH	(610 - 2438 mm)	(152 mm)	(584 mm)	(64 mm)
GRA &	18" - 144"	6"	23"	2-1/2"
GRAH	(457 - 3658 mm)	(152 mm)	(584 mm)	(64 mm)

NOTE: Units shown with optional 9-3/8" (187 mm) breath protectors and mounting flanges. Not available for retro-fit or on GR and GRH models.

Models	Width	Depth	Depth	Height
	(A)	(B)	(C)	(D)
GRAL &	18" - 144"	9"	26"	2-1/2"
GRAHL	(457 - 3658 mm)	(229 mm)	(660 mm)	(64 mm)

NOTE: Units shown with optional 9-3/8" (187 mm) breath protectors and mounting flanges. Not available for retro-fit.

Models	Width	Depth*	Depth*	Height
	(A)	(B)	(C)	(D)
GRA-XXD &	18" - 144"	15"	32"	2-1/2"
GRAH-XXD	(457 - 3658 mm)	(381 mm)	(813 mm)	(64 mm)
GRAL-XXD &	18" - 144"	15"	32"	2-1/2"
GRAHL-XXD	(457 - 3658 mm)	(381 mm)	(813 mm)	(64 mm)

NOTE: Units shown with optional 9-3/8" (187 mm) breath protectors and mounting flanges. Not available for retro-fit.

* Dimension shown is standard with 3" (76 mm) spacer; when used with 6" (152 mm) spacer add 3" (76 mm).

Models	Width	Depth	Height
	(A)	(B)	(C)
GRN &	18" - 72"	4"	2"
GRNH	(457 - 1829 mm)	(102 mm)	(51 mm)

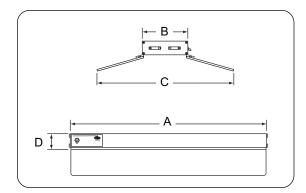


Figure 6. Dimensions–GR, GRH, GRA & GRAH Models

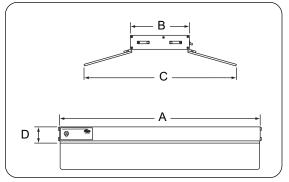


Figure 7. Dimensions-GRAL & GRAHL Models

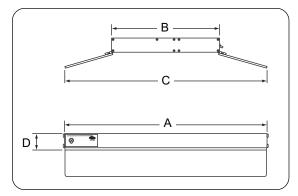


Figure 8. Dimensions–GRA-D, GRAH-D, GRAL-D & GRAHL-D Models

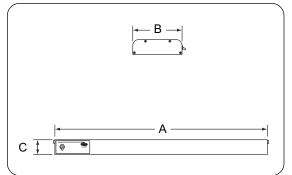


Figure 9. Dimensions-GRN & GRNH Models

UNPACKING

- 1. Remove the unit from the carton and remove all packing materials.
- 2. Remove information packet. To prevent delay in obtaining warranty coverage, fill out and mail in warranty card.

NOTE: If unit is equipped with optional equipment, see ACCESSORIES section at back of this manual.

LOCATION

For safe and proper operation, the unit must be located the correct distance from combustible walls and materials. If safe distances are not maintained, discoloration or combustion could occur. Refer to specific installation and mounting information in this manual for proper clearances.

To prevent any injury or damage to the unit do not store or use gasoline or other flammable vapors or liquids in the vicinity of this or any other appliance.

To prevent combustion or damage to materials do not install standard wattage strip heater (GR, GRA, GRN, GRAL Series) less than 10" (254 mm) above a non-metallic surface. Do not install high wattage strip heater (GRH, GRAH, GRNH, GRAHL Series) less than 13-1/2" (343 mm) above a non-metallic surface. Do not install dual strip heaters (GRA-XXD, GRAH-XXD, GRAL-XXD & GRAHL-XXD Series) above non-metallic surface. Install all non-dual strip heaters so there is a minimum distance of 3" (76 mm) from a nonmetallic wall or adjacent surface.

To prevent unit failure do not add a decorative soffit to hide a pass-through mounted Glo-Ray Strip Heater.

To avoid any injury or damage all electrical connections must be in accordance with local electrical codes and any other applicable codes. Connections should be made by a qualified, licensed electrician.

NOTICE

Heat damage to countertop material such as Corian[®] and similar products (other than stainless steel) is not covered under the Hatco warranty. Contact the manufacturer of the base material for temperature limits and application information before installing the unit.

NOTE: Contact the countertop manufacturer of the base material for application information and surface temperature limits before installing the unit.

Dual Mounting

Dual models ordered from the factory are shipped with either a 3" (76 mm) or 6" (152 mm) spacer.

NOTE: When mounting units side-by-side, a space not less than 3" (76 mm) must be maintained between units.

NOTE: Dual models are only available with Glo-Ray aluminum housings.

Installation of two or more single units with less than 3" (76 mm) between housings may result in premature failure of component parts.

When proper distances are maintained, hot foods will be held at ideal serving temperatures without cooking the foods beyond the point of excellence. See Figures 10-12 for strip heater spacing requirements.

Under Shelf Mounting

When mounting unit under a shelf, use adjustable angle brackets to assure proper spacing. Remote control enclosures are recommended to keep switches out of the heat zone.

To assure safe and proper operation refer to Installation Clearance Requirements listed in this manual.

Pass-Through

If pass-through area is 12" to 16" (305 to 406 mm) deep, the standard wattage or high wattage single unit can be used. For a 20" to 24" (508 to 610 mm) deep pass-through area, a dual unit in either standard or high wattage is recommended. Dual units must always have a minimum spacing of 3" (76 mm) between heaters.

T-Legs or C-Legs

Do not mount units longer than 72" (1829 mm) on T-legs or C-legs.

Over Steam Table

When mounting over steam table, a remote control switch enclosure must be installed.

Unit is not moisture proof. Spacing of at least 16" (406 mm) is required for all units mounted over a steam table.





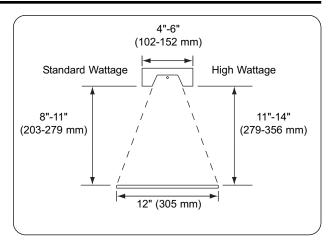


Figure 10. Recommended Element Height for the GR, GRA, GRH, GRN, GRAH, GRAL, GRNH, and GRAHL in all lengths (excluding dual models).

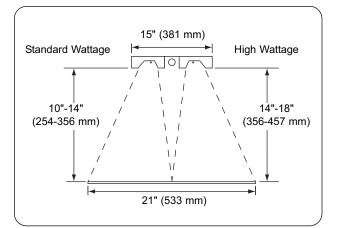

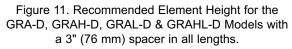

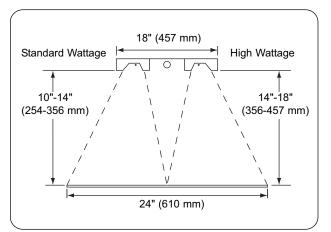

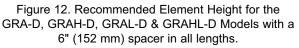

ASSEMBLY

Glo-Ray[®] Strip Heaters are shipped with most components pre-assembled. Dual units are available with a required 3" (76 mm) or 6" (152 mm) spacer pre-assembled at the factory.

Optional breath protectors, mounting equipment and remote control enclosures must be installed on location.

PORTABLE SURFACE MOUNT T-Leg Stand

NOTE: T-Leg not to be used with dual Glo-Ray units.

NOTE: T-Leg stands available in standard wattage -10" (254 mm), high wattage - 13-1/2" (343 mm), 16" (406 mm), and 18" (457 mm).

- 1. Position the unit upside-down on a flat surface.
- 2. Remove the two screws and mounting tabs from each end of the unit.
- 3. Position the mounting bracket on the underside of the unit and remove the two screws on the unit that match up with the holes on the mounting bracket.
- 4. Secure the mounting bracket to the unit with the previously removed screws.
- 5. Align two mounting holes on side of T-Leg with two holes on end of unit and attach leg with screws supplied.
- 6. Align the mounting hole on the T-Leg bracket with the hole on the mounting bracket and secure with a screw. (See Figure 13.)

C-Leg Stand

NOTE: C-Legs are not to be used with dual Glo-Ray models.

NOTE: Two types of C-Legs are available. CL-Low, 10" (254 mm) clearance, is for standard wattage Glo-Ray models up to 6 ft. (1829 mm) in width only. CL-High, 13-1/2" (343 mm) clearance, is for high wattage Glo-Ray models up to 6 ft. (1829 mm) in width only.

- 1. Position the unit upside-down on a flat surface.
- 2. Remove the two screws and mounting bracket from each end of the unit.

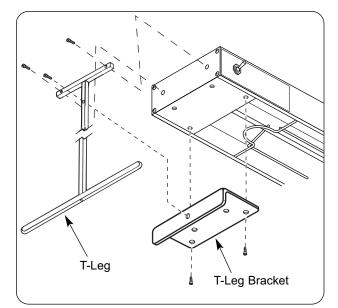


Figure 13. T-Leg Stand End Mounting

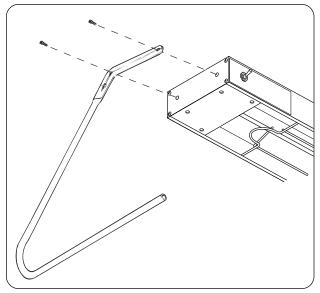


Figure 14. C-Leg Stand

3. Attach C-Leg to each end of unit using original screws. (See Figure 14.) Tighten screws securely.

PERMANENT SURFACE MOUNT

Tubular Stand Mounting

Tubular stand mounting permanently attaches the unit to a countertop or serving table. All wiring may be concealed within the tubular stand.

Tubular stands are available in non-adjustable heights from 10"-16" (254-406 mm) or in adjustable heights from 10"-14" (254-356 mm).

NOTE: Tubular stands are not field retro-fittable.

NOTE: If wiring is to be concealed, a 1" (25 mm) diameter hole must be provided in the mounting surface, centered under the leg flange nearest the electrical wiring hookup.

- 1. Position the unit upside-down on a flat surface.
- 2. Units for this application are supplied with the conduit attached. Conduit should not be removed.
- 3. If applicable, route flexible conduit through the leg opening. Pull the leg up to the underside of the warmer. (See Figure 15.)
- 4. Secure legs to warmer using screws supplied.
- 5. If applicable, route the flexible conduit through opening in countertop.
- 6. Secure the legs to the mounting surface.

NOTE: The adjustable legs can be raised or lowered by turning the locking set screw counterclockwise one turn with an allen wrench, and then raising or lowering the unit to the desired height and retightening the screw. Do not loosen the screw more than necessary.

NOTE: Two pairs of legs will be needed for mounting dual units.

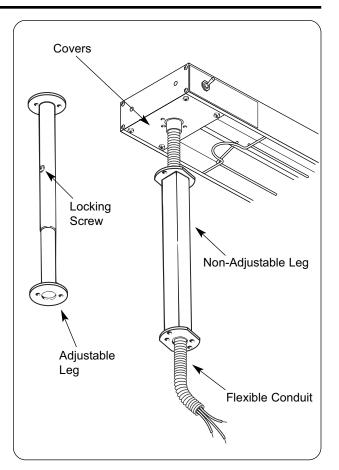


Figure 15. Tubular Stand Mounting

UNDERSHELF MOUNTING

Pass Thru

NOTE: When mounting the unit under a shelf, it is recommended to use a remote switch enclosure.

If the shelf has a rolled or flanged edge, use the optional adjustable angle brackets to mount the unit below the lowest part of the rolled or flanged edge. (See Figure 16.)

NOTE: GRN Series units are supplied with matching Designer colored angle brackets providing 1-1/2" (38 mm) clearance between foodwarmer and overshelf.

To assure safe and proper operation refer to Installation Clearance Requirements listed in this manual.

Adjustable Angle Bracket Mounting

NOTE: When mounting the unit under a shelf it is recommended to use a remote control enclosure.

NOTE: Multiple brackets will be needed for dual units.

- 1. Position the Glo-Ray unit on a flat surface with the heating element facing down.
- 2. Remove the two screws and mounting tabs from each end of the Glo-Ray unit.
- 3. Remove the two upper end plate screws.
- 4. Align the adjustable angle bracket to the end plate mounting holes of the Glo-Ray unit. Secure angle bracket with previously removed screws.
- 5. Fasten angle bracket to the underside of the shelf using appropriate fasteners. (Not supplied by Hatco.)

Hanger Tab Mounting

The standard mounting tabs supplied with the unit can be bent 90° for mounting the unit underneath a shelf without a rolled or flanged edge. (See Figure 17.)

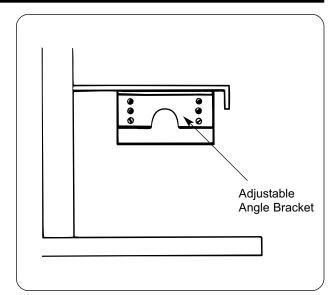


Figure 16. Adjustable Angle Bracket Mounting

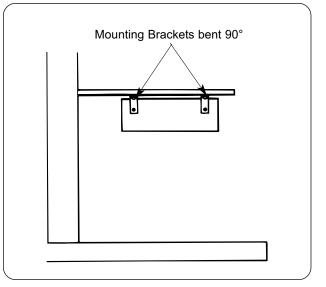


Figure 17. Hanger Tab Mounting

Clearance Requirements for <u>Combustible</u> Surroundings

Models	(A)	(B)	(C)
GRA &	10"	3"	1"
GRAL	(254 mm)	(76 mm)	(25 mm)
GRAH &	13-1/2"	3"	1"
GRAHL	(343 mm)	(76 mm)	(25 mm)

NOTE: Dual Strip Heaters are not to be installed in combustible surroundings.

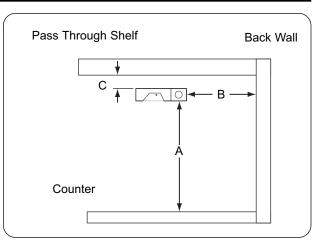


Figure 18. Combustible Spacing Requirements

Clearance Requirements for <u>Non-Combustible</u> Surroundings

Corded Units with Built-In Switches


Models	(A)	(B)†	(C)
GRA &	10"	N/A	3"
GRAL	(254 mm)		(76 mm)
GRAH &	11"	N/A	3"
GRAHL	(279 mm)		(76 mm)

Hardwired Units with Built-In Switches

Models	(A)	(B)†	(C)
GRA & GRAL	8" (203 mm)	N/A	1" (25 mm)
GRAH & GRAHL with Infinite Heat Control Switch or Indicator Light	10" (254 mm)	N/A	1" (25 mm)
GRAH & GRAHL with On/Off Toggle Switch	8" (203 mm)	N/A	1" (25 mm)

Hardwired Units with Remote Switches

Models	(A)	(B)	(C)
GRA &	8"	0"	0"
GRAL	(203 mm)	(0 mm)	(0 mm)
GRAH &	8"	0"	0"
GRAHL	(203 mm)	(0 mm)	(0 mm)

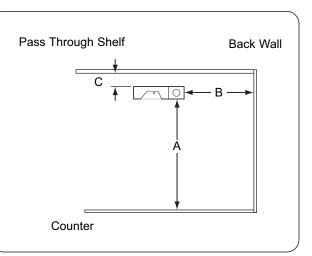



Dual Units with Built-In Switches

Models	(A)	(B)†	(C)
GRA-XXD GRAH-XXD GRAL-XXD GRAHL-XXD	10" (254 mm)	N/A	1" (25 mm)

Dual Units with Remote Switches

Models	(A)	(B)	(C)
GRA-XXD GRAH-XXD GRAL-XXD GRAHL-XXD	8" (203 mm)	3" (76 mm)	0" (0 mm)

†Must be a pass-through application, not allowed with back wall installation.

CEILING MOUNTING Chain Mounting

To avoid any injury or damage to the unit when using chains for installation, the chains must have sufficient strength and be securely fastened, or the unit could become loose or fall. Do not place anything on top of warmers supported by chains.

Chain supplied by Hatco is constructed of sufficient strength to securely hold the weight of the unit only when properly mounted.

- 1. Securely fasten the chain to the surface above the desired area. Be sure chain is located so the unit will be suspended at a safe and proper distance from walls, counter and food.
- 2. Loosen but do not remove the screws securing the mounting tabs on each end of the unit. Extend the tabs, then tighten the screws securely. (See Figure 20.)
- 3. Attach a short piece of connecting chain to each pair of mounting tabs. (See Figure 20.)
- 4. Attach overhead chain to the connecting chain between the two mounting tabs. Repeat for other end of unit. (See Figure 20.)

NOTE: Additional chain will be needed for dual Glo-Ray units.

Chain Mounting with "S" Hook

Units supplied from Hatco with power cord attached come with the connecting chain and "S" hook already attached to the mounting tabs.

- 1. Securely fasten the chain to the surface above the desired area. Be sure chain is located so the unit will be suspended at a safe and proper distance from walls, counter and food.
- 2. Attach both "S" hooks to the overhead chains and ensure the unit is level. (See Figure 20.)

BREATH PROTECTOR (Optional)

- 1. Remove protective paper from the acrylic surfaces.
- 2. Position the acrylic breath protector into the channel on the warmer with the mounting holes aligned. (See Figure 21.)
- 3. Secure the breath protector using the weld screws and acorn nuts provided. Tighten weld screws until snug. Do not overtighten.

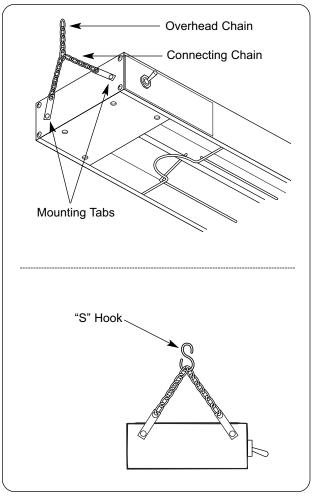


Figure 20. Mounting with Chains

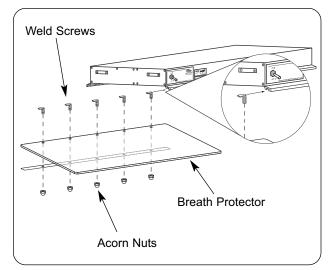


Figure 21. Installing Breath Protectors

ELECTRICAL WIRING HOOK-UP

Refer to the *ELECTRICAL RATING CHARTS* for specific information.

NOTE: If the unit being installed is not shown or listed in this manual refer to the wiring diagram supplied and installation information on the unit for further instruction.

To avoid any injury or damage all electrical connections must be in accordance with local electrical codes and any other applicable codes. Connections should be made by a qualified, licensed electrician.

Strip Heaters with incandescent lights that require a circuit breaker larger than 20 amps must have a separate circuit breaker for the incandescent lights that is 20 amps or less.

NOTICE

To prevent premature failure to components the Remote Control Box (RMB) must be installed outside the strip heater heat zone.

Power Supply

Install supply wire and connectors suitable for at least $90^{\circ}C$ (194°F).

- Use a minimum of No. 14 AWG copper wire for individual circuits up to 15 amps.
- Use a minimum of No. 12 AWG copper wire for individual circuits 15 to 20 amps.
- Use a minimum of No. 10 AWG copper wire for individual circuits 20 to 25 amps.

NOTE: Refer to wiring diagram supplied with unit and specifications label attached to unit for specific electrical information.

Conduit Connection

Units supplied with flexible conduit with right angle fitting attached come equipped with all internal connections completed at the factory. Attach proper power supply leads to the high temperature lead wires supplied. (See Figure 22.)

NOTE: Refer to wiring diagram supplied with unit and specification label attached to warmer for specific electrical information.

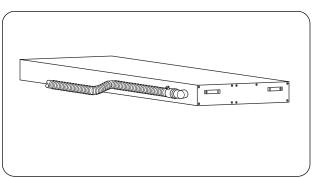


Figure 22. Conduit Connections

Power Cord and Plug Models

Units can be supplied with a power cord and plug attached from the factory, if the unit meets the following guidelines:

- · Single unit only, no dual units
- 72" (1829 mm) or less in length
- Portable mounting using C-Legs or T-Legs supplied by Hatco or Stationary mounting using "S" hooks and mounting chain supplied by Hatco.

Units equipped with a cord and plug supplied by Hatco must be plugged into a properly grounded electrical outlet of the correct voltage, size and plug configuration. If the plug and receptacle do not match, contact a qualified electrician to determine the proper voltage and size and install the proper electrical outlet.

NOTE: Units intended for fixed or permanent mounting cannot have a power cord attached and must be hard wired according to local and national electrical codes.

Remote Mounted Control Box (RMB)

Hatco Remote Mounted Control Boxes include switches, wire leads and/or indicator lights and are ready for installation. Proper use of RMB's require one RMB per strip heater.

NOTICE

To prevent premature failure to components the Remote Control Box (RMB) must be installed outside the foodwarmer heat zone.

Control Switches

When two or more units are mounted where the heat from one housing tends to raise the temperature of another, the control switches should be installed in a remote control enclosure. Units in a multiple installation should use remote control enclosures. NOTE: Remote control enclosures are available in five sizes. All models are built in accordance with U.L. standards to accommodate switches, indicator lights and wiring, ready for installation. See ACCESSORIES at the back of this manual.

OPERATION

Some exterior surfaces on the unit will get hot. Use caution when touching these areas to avoid injury.

The unit is not waterproof. DO NOT submerge in water. Do not operate if it has been submerged in water.

Standard and approved manufacturing oils will smoke up to 30 minutes during initial start-up. This is a temporary condition. To assure safe operation, operate unit without food product until smoke dissipates.

Heating Element(s)

Heating element(s) are controlled by an ON/OFF toggle switch(es) or an optional infinite switch(es). To turn each element on, either flip the toggle switch to the ON position or turn the adjustable switch to the desired setting.

Allow 15-20 minutes to reach operating temperature.

NOTE: Remote control enclosures are recommended for all Glo-Ray units.

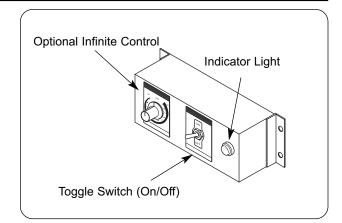


Figure 23. Remote Control Box (RMB) (RMB-7 Series Shown)

Lights

On models equipped with lights, flip the toggle switch to the ON position to energize the lights.

NOTE: Dual Glo-Ray units do not use a built-in infinite switch.

CLEANING

Hatco Glo-Ray[®] Strip Heater units are designed for maximum durability and performance, with minimum maintenance.

To avoid any injury or damage to the strip heater turn the power OFF at the disconnect switch/circuit breaker and allow to cool before performing any maintenance.

To preserve the finish of the Glo-Ray Strip Heater, it is recommended that the surfaces be wiped daily with a clean, soft, damp cloth. Stubborn stains maybe be removed with a good stainless steel cleaner or a non-abrasive cleaner. Hard to reach areas should be cleaned with a small brush and mild soap.

NOTICE

Use only non-abrasive cleaners. Abrasive cleaners could scratch the finish of your unit marring its appearance and making it susceptible to soil accumulation.

DISPLAY LIGHT BULB REPLACEMENT

The display light is an incandescent bulb which illuminates the warming area. This bulb has a special coating to guard against injury and food contamination in the event of breakage.

To replace a bulb, disconnect the power supply and wait until the unit has cooled. Display lamps have a threaded base. Unscrew the bulb from the unit and replace it with a new specially coated incandescent bulb. Hatco shatter-resistant bulbs meet NSF standards for food holding and display areas.

NOTE: Hatco shatter-resistant light bulbs meet NSF standards for food holding and display areas. For 120, 120/208, 120/240 and 100/200 Volt applications, use Hatco part number 02.30.043.00. For 200, 220, 230 and 240 Volt units use Hatco part number 02.30.058.00.

Only light bulbs which meet or exceed NSF standards, specially designed for food holding areas may be used. Breakage of light bulbs not specially coated could result in personal injury and/or food contamination.

If service is required on this unit, contact your Authorized Hatco Service Agent, or contact the Hatco Service Department at 800-558-0607 or 414-671-6350; fax 800-690-2966 or International fax 414-671-3976.

This product has no "user" serviceable parts. To avoid damage to the unit or injury to personnel, use only Authorized Hatco Service Agents and Genuine Hatco Replacement Parts when service is required.

Genuine Hatco Replacement Parts are specified to operate safely in the environments in which they are used. Some aftermarket or generic replacement parts do not have the characteristics that will allow them to operate safely in Hatco equipment. It is essential to use Hatco Replacement Parts when repairing Hatco equipment. Failure to use Hatco Replacement Parts may subject operators of the equipment to hazardous electrical voltage, resulting in electrical shock or burn.

ACCESSORIES

REMOTE CONTROL ENCLOSURES

Hatco Remote Control Enclosures are available in various sizes and configurations for use with the Strip Heaters. All models are built in accordance with U.L. standards to accommodate switches, indicator lights and wiring. Consult the factory for type and location of switches for enclosure.

NOTICE

To prevent premature failure to components the Remote Control Box (RMB) must be installed outside the strip heater heat zone.

NOTE: Proper use of RMB's require one RMB per strip heater.

INCANDESCENT LIGHT


The Strip Heaters with aluminum housings may be equipped from the factory with incandescent display lights to illuminate the warming area.

Hatco shatter-resistant bulbs guard against injury and food contamination in the event of breakage. The display lighting meets NSF standards for food holding and display areas.

NOTE: Display lights cannot be retrofitted to units.

INDICATOR LIGHT

An optional red indicator light is available for mounting on either side of the unit. The indicator light provides an instant visual check of the unit operation.

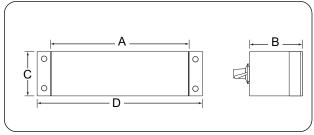

Models	Width	Depth	Height	Width
	(A)	(B)	(C)	(D)
RMB-3 Series	5-1/2"	3"	2-1/2"	7"
	(140 mm)	(76 mm)	(64 mm)	(178 mm)
RMB-7 Series	9"	3"	2-1/2"	10-1/2"
	(229 mm)	(76 mm)	(64 mm)	(267 mm)
RMB-14 Series	14"	3"	2-1/2"	15-1/2"
	(356 mm)	(76 mm)	(64 mm)	(394 mm)
RMB-16 Series	16"	3"	2-1/2"	17-1/2"
	(406 mm)	(76 mm)	(64 mm)	(445 mm)
RMB-20 Series	20"	3"	2-1/2"	21-1/2"
	(508 mm)	(76 mm)	(64 mm)	(546 mm)

Figure 24. Dimensions -Remote Control Box (RMB)

TROUBLESHOOTING GUIDE

To avoid any injury or damage the strip heater must only be serviced by qualified personnel.

To avoid any injury or damage to the strip heater turn the power OFF at the disconnect switch/circuit breaker and allow to cool before performing any maintenance.

SYMPTOM	PROBABLE CAUSE	CORRECTIVE ACTION
Unit is turned "ON" but there is no heat.	No power to unit.	Check circuit breaker and reset as necessary. If power cord connected check for damage to cord. If power cord connected check power outlet.
	Switch is defective.	Check input and output sides of the switch for power. If proper power on supply side but nothing on output side replace switch.
	Wiring is open.	Check for power at the heating element. If no power at element check wiring for break or bad connection. Repair or replace as necessary.
	Heating element defective.	Check heating element for continuity. Using an ohm meter check the resistance of element.
		Resistance in ohms = voltage ² wattage
		Example: GRAH-48, 120 Volt is rated for 1100 watts.
		$\frac{(120)^2}{Wattage} = \frac{14,400}{1100} = 13.09 \text{ ohms}$
		Replace heating element if defective.
Heat is inadequate.	Unit mounted too high above target area.	Lower unit, putting effective heat closer to target.
	Excessive air movement around strip heater target area.	Restrict or redirect air movement (ie air conditioning duct or exhaust fan) away from unit.
	Incorrect power supply (low).	Check power supply to unit, making sure it matches rating on the unit. If power supply is incorrect, change to match rating on unit.

TROUBLESHOOTING GUIDE

SYMPTOM	PROBABLE CAUSE	CORRECTIVE ACTION
Heat is excessive.	Unit mounted too close to target area.	Check to see that installation is within specifications for type/model. Increase mounting height if too close.
	Voltage supply too high.	Check power supply to unit, making sure it matches rating on unit. If power supply is incorrect, change to match rating.
Control switches burn-out rapidly.	Switches are mounted in the heat zone.	Check switch location per Hatco guidelines in the Glo-Ray Installation and Operations Manual. Relocate switches to a cooler zone if installation is incorrect.
	Switches used are not Hatco supplied.	Genuine Hatco components are specified to operate safely and properly in the environment in which they are used. Replace switches with Genuine Hatco Parts if switches are aftermarket or generic.

1. PRODUCT WARRANTY

Hatco warrants the products that it manufactures (the "Products") to be free from defects in materials and workmanship, under normal use and service, for a period of one (1) year from the date of purchase when installed and maintained in accordance with Hatco's written instructions or 18 months from the date of shipment from Hatco. Buyer must establish the product's purchase date by returning Hatco's Warranty Registration Card or by other means satisfactory to Hatco in its sole discretion.

Hatco warrants the following Product components to be free from defects in materials and workmanship from the date of purchase (subject to the foregoing conditions) for the period(s) of time and on the conditions listed below:

a) One (1) Year Parts and Labor PLUS One (1) Additional Year Parts-Only Warranty: Toaster Elements (TQ, TRH,TK metal sheathed)

Drawer Warmer Elements (metal sheathed) Drawer Warmer Drawer Rollers and Slides Food Warmer Elements (metal sheathed) Display Warmer Elements (metal sheathed air heating)

Holding Cabinet Elements (metal sheathed air heating)

- b) One (1) Year Parts and Labor PLUS Four
 (4) Years Parts-Only Warranty on pro-rated terms that Hatco will explain at Buyer's request: 3CS and FR Tanks
- c) One (1) Year Parts and Labor PLUS Nine
 (9) Years Parts-Only Warranty on: Electric Booster Heater Tanks
 Gas Booster Heater Tanks

THE FOREGOING WARRANTIES ARE EXCLUSIVE AND IN LIEU OF ANY OTHER WARRANTY, EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR PATENT OR OTHER INTELLECTUAL PROPERTY RIGHT INFRINGEMENT. Without limiting the generality of the foregoing, SUCH WARRANTIES DO NOT COVER: Coated incandescent light bulbs, fluorescent lights, lamp warmer heat bulbs, glass components, Product failure in booster tank, fin tube heat exchanger, or equipment, caused other water heating by liming, sediment buildup, chemical attack or freezing. Product misuse. tampering or misapplication, improper installation or application of improper voltage.

2. LIMITATION OF REMEDIES AND DAMAGES

Hatco's liability and Buyer's exclusive remedy hereunder will be limited solely, at Hatco's option, to repair or replacement by a Hatco-authorized service agency (other than where Buyer is located outside of the United States, Canada, United Kingdom or Australia in which case Hatco's liability and Buyer's exclusive remedy hereunder will be limited solely to replacement of part under warranty) with respect to any claim made within the applicable warranty period referred to above. Hatco reserves the right to accept or reject any such claim in whole or in part. Hatco will not accept the return of any Product without prior written approval from Hatco, and all such approved returns shall be made at Buyer's sole expense. HATCO WILL NOT BE LIABLE, ANY CIRCUMSTANCES, UNDER FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, INCLUDING BUT NOT LIMITED TO LABOR COSTS OR LOST PROFITS RESULTING FROM THE USE OF OR INABILITY TO USE THE PRODUCTS OR FROM THE PRODUCTS BEING INCORPORATED IN OR BECOMING A COMPONENT OF ANY OTHER PRODUCT OR GOODS.

HATCO AUTHORIZED PARTS DISTRIBUTORS

ALABAMA

Jones McLeod Appl. Svc. Birmingham 205-251-0159

ARIZONA

Auth. Comm. Food Equip. Phoenix 602-234-2443 Byassee Equipment Co. 602-252-0402 Phoenix

CALIFORNIA

Industrial Electric Commercial Parts & S Huntington Beach	ervice, Inc. 714-379-7100
Chapman Appl. Servic San Diego	e 619-298-7106
P & D Appliance Commercial Parts & S S. San Francisco	ervice, Inc. 650-635-1900

COLORADO

Hawkins Commercial Appliance 303-781-5548 Englewood

FLORIDA

Whaley Foodservice R Jacksonville	epair 904-725-7800
Nass Service Co., Inc. Orlando	407-425-2681
B.G.S.I. Pompano Beach	954-971-0456
Comm. Appliance Serv Tampa	rice 813-663-0313
GEORGIA	

<u>GEORGIA</u>

TWC Services Smyrna	770-438-9797
Heritage Service Grou	ip
Norcross	866-388-9837
Southeastern Rest. So	/c.
Norcross	770-446-6177

<u>HAWAII</u>

Burney's Comm. Service, Inc. 808-848-1466 Honolulu

Food Equip Parts & Service 808-847-4871 Honolulu

ILLINOIS

Parts Town Lombard	708-865-7278
Eichenauer Elec. Serv Decatur	ice 217-429-4229
Midwest Elec. Appl. Se Elmhurst	ervice 630-279-8000
Cone's Repair Service Moline	309-797-5323
INDIANA	
GCS Service Indianapolis	317-545-9655

Service Plus

Flanders

IOWA

Electric Motor Service Co. Davenport 319-323-1823 Goodwin Tucker Group 515-262-9308 **Des Moines KENTUCKY** Certified Service Center 859-254-8854 Lexington Certified Service Center Louisville 502-964-7007 LOUISIANA Chandlers Parts & Service Baton Rouge 225-272-6620 MARYLAND Electric Motor Service 410-467-8080 Baltimore GCS Service 301-585-7550 Silver Spring MASSACHUSETTS Ace Service Co., Inc Needham 781-449-4220 MICHIGAN Commercial Kitchen Service Bay City 517-893-4561 **Bildons Appliance Service** 248-478-3320 Detroit Midwest Food Equip. Service Grandville 616-261-2000 MINNESOTA GCS Service 612-546-4221 Minneapolis MISSOURI General Parts Kansas City 816-421-5400 **Commercial Kitchen Services** St. Louis 314-890-0700 Kaemmerlen Parts & Service 314-535-2222 St. Louis **NEBRASKA** Anderson Electric Omaha 402-341-1414 NEVADA Burney's Commercial 702-736-0006 Las Vegas Hi. Tech Commercial Service 702-649-4616 N. Las Vegas **NEW JERSEY** Jay Hill Repair Fairfield 973-575-9145

NEW YORK

Acme American Repairs, Inc. Brooklyn 718-456-6544 Alpro Service Co. Brooklyn 718-386-2515 Appliance Installation Buffalo 716-884-7425 Northern Parts Dist. 518-563-3200 Plattsburgh J.B. Brady, Inc. 315-422-9271 Syracuse NORTH CAROLINA Authorized Appliance Charlotte 704-377-4501 <u>OHIO</u> Akron/Canton Comm. Svc. Inc. 330-753-6635 Akron Certified Service Center Cincinnati 513-772-6600 Commercial Parts and Service 614-221-0057 Columbus Electrical Appl. Repair Service Independence 216-459-8700 E. A. Wichman Co. Toledo 419-385-9121 **OKLAHOMA** Hagar Rest. Service, Inc. Oklahoma City 405-235-2184 Krueger, Inc. Oklahoma City 405-528-8883 OREGON Ron's Service, Inc. 503-624-0890 Portland PENNSYLVANIA Elmer Schultz Services 215-627-5401 Philadelphia

FAST Comm. Appl. Service Philadelphia 215-288-4800 Appliance Installation & Service 412-809-0244 Pittsburgh K & D Service Co. 717-236-9039 Harrisburg Electric Repair Co. Reading 610-376-5444 RHODE ISLAND Marshall Electric Co. 401-331-1163 Providence

SOUTH CAROLINA Whaley Foodservice Repair

Camp Electric

Memphis

W. Columbia 803-791-4420 TENNESSEE

901-527-7543

<u>TEXAS</u>

GCS Service Fort Worth	817-831-0381
Armstrong Repair Ser Houston	vice 713-666-7100
Commercial Kitchen R San Antonio	epair Co. 210-735-2811
<u>UTAH</u>	
La Monica's Rest. Equ Murray	ip. Service 801-263-3221
<u>VIRGINIA</u>	
Daubers Norfolk	757-855-4097
Daubers Springfield	703-866-3600
WASHINGTON	
Restaurant Appl. Serv Seattle	ice 206-524-8200
<u>WISCONSIN</u>	
A.S.C., Inc. Madison	608-246-3160
A.S.C., Inc. Milwaukee	414-543-6460

CANADA

<u>ALBERTA</u>	
Key Food Equipment	Service 780-438-1690
BRITISH COLUMBIA	
Key Food Equipment Vancouver	Service 604-433-4484
MANITOBA	
Air Rite, Inc. Winnepeg	204-895-2300
NEW BRUNSWICK	
EMR Services, Ltd. Moncton	506-855-4228
<u>ONTARIO</u>	
R.G. Henderson Ltd. Toronto	416-422-5580
Choquette CKS Ottawa	613-739-8458
<u>QUÉBEC</u>	
Choquette CKS Montreal	514-722-2000
Choquette CKS Québec City	418-681-3944

HATCO CORPORATION

973-691-6300

P.O. Box 340500, Milwaukee, WI 53234-0500 U.S.A. (800) 558-0607 (414) 671-6350 Parts & Service Fax (800) 690-2966 Int'l. Fax (414) 671-3976 www.hatcocorp.com